

取扱説明書 補足

VER.1.01.06

追加項目(P.85) ○出力方式 (対応受信機)・FH5U：RX-491追加, OFH5Uの使用時の注意点追加

バインド [BIND]

システム [SYSTEM]

- 使用する受信機にあわせた出力方式の選択や、使用するサーボ（デジタル / アナログ）やスピードコントローラーにあわせてモードの設定や送信機と受信機のバインドをおこないます。

- RX-491 は Dual ID 仕様の受信機となっております。

1) タッチ パッドで [SYSTEM] を選択し、エンター操作で決定します。

2) タッチ パッドで [BIND] を選択してエンター操作で決定します。

- 3) アールエフ モードの設定 (RF MODE：電波の出力方式)
タッチ パッドで出力方式を設定します。

○出力方式 (対応受信機)


・FH5U：RX-491 ←追加

・FH5：RX-491

・FH4T：RX-482, RX-481WP, RX-481, RX-472, RX-471Dual ID,
RX-471W, RX-471, RX-47T, RX-462, RX-461,
SV-PLUS シリーズ用モード

・FH3：RX-451R, RX-451, RX-381, RX-380 用モード

追加

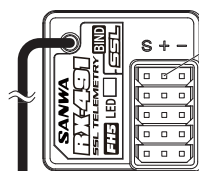
SSL/BAT：BIND/SSLポート
注)FH5U時にはSSLポートに
バッテリー以外の機器を
接続しても使用できません

⚠ 注意

- FH5Uを使用する場合はテレメトリー機能は使用できません。
- FH5U時にはSSLポートにバッテリー以外の機器を接続しても使用できません。

追加項目(P.86) ○設定範囲 SXR追加, OSXRの使用時の注意点追加

バインド [BIND]

システム [SYSTEM]

- 6) レスポンス モードの設定

タッチ パッドで各チャンネルのレスポンス モードを設定します。

※使用する機器に合わせて、各チャンネルのレスポンス モードを設定してください。

・レスポンス モードはチャンネルごとに設定できます。


○設定範囲 NOR(ノーマル)

SHR(ハイレスポンス)

SSR(スーパーレスポンス)

SUR(ウルトラレスポンス)

[SXR(エクストリームレスポンス)] ←追加

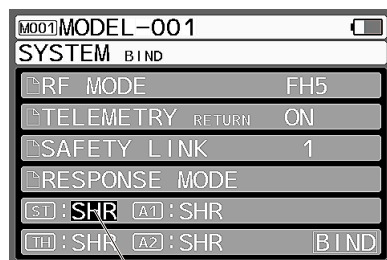

レスポンス モード

※SXRのレスポンス モードはFH5U設定時のみ表示されます。

追加

重要

- SXRの対応機器はPGS-LH2, PGS-XB2, PGS-XR2, PGS-CL2, PGS-CX2のみで動作します。
対応機器以外では動作しませんのでご注意ください。
- SXR/SUR/SSR/SHRモードではアナログサーボは動作しませんのでご注意ください。
誤ってSXR/SUR/SSR/SHRモードでアナログサーボを使用すると正常に動作せずサーボが壊れます。
絶対にSXR/SUR/SSR/SHRモードでアナログサーボを使用しないでください。
デジタルサーボ(ERB, ERSシリーズ, Digital ERGシリーズ)の場合はNOR/SHRモードで動作します。
- PGSサーボ(2以外)はSUR/SSR/SHR/NORモード, SRGサーボはSSR/SHR/NORモードで動作します。
- SUPER VORTEX/SV-PLUSシリーズ, HV-12 STOCK SPECIAL, HV-01はSSR/SHR/NORモードで動作します。
- SXR/SUR/SSR/SHRモードではBL-RACER, BL-FORCE, F2000, F2200, F3300, SBL-01/02/03CLは動作しません。
必ずNORモードでご使用ください。
- SV-08, HV-10, HV-12, F2500はNOR/SHRモードで動作します。

Additional contents for P.85

OAdd Response Mode (Compatible receiver) FH5U : RX491, OFH5U Explanation when using FH5U

[BIND]

[SYSTEM]

●Setting response mode for using Servo(digital / analog) and Electric Speed Controller when binding with receiver. Response mode is depends on kind of receiver, servo, and electric speed controller.

●RX-491 specification is DUAL ID system.

1) Select and enter [SYSTEM] by touchpad operation.

2) Select and enter [BIND] by touchpad operation.

3) RF MODE Setting (RF MODE can select output system)
Set RF MODE by touchpad operation.


ORF MODE (Compatible receiver)

• [FH5U : RX-491] ←NEW

• FH5 : RX-491

• FH4T : RX-482, RX-481WP, RX-481, RX-472, RX-471Dual ID,
RX-471W, RX-471, RX-47T, RX-462, RX-461,
SV-PLUS Series

• FH3 : RX-451R, RX-451, RX-381, RX-380

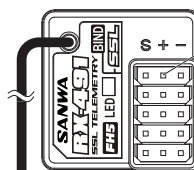

SSL/BAT : BIND/SSL Port

* While using FH5U, only battery can use at the SSL port.

NEW

⚠ Notice

●While using FH5U Mode, telemetry function cannot be used.

●While using FH5U, only battery can be used at SSL port.

Additional contents for P.86

OAdd Setting Range SXR, OSXR Explanation when Using SXR mode

[BIND]


[SYSTEM]

6) Response Mode Setting

Set each channel response mode by touchpad operation.

※Please set the channel response mode for using devices.

• Response mode can be set each channels

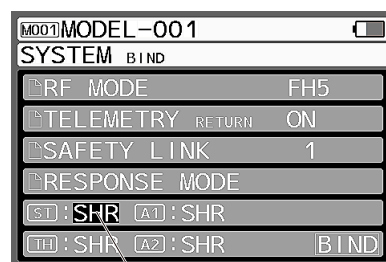OSetting Range NOR (Normal)
SHR (High Response)
SSR (Super Response)
SUR (Ultra Response)
[SXR (Extreme Response)] ←NEW


Response Mode

※ SXR can be selected only using FH5U RF MODE.

NEW

Important

●PGS-LH2, PGS-XB2, PGS-XR2, PGS-CL2, PGS-CX2 are compatible with SXR Mode.

Non compatible devise cannot operate with the SXR Mode.

●Analog servo cannot operate with SXR/SUR/SSR/SHR Mode.

In case of using analog servo with SXR/SUR/SSR/SHR mode, the servo cannot operate and break.

DO NOT use analog servo with SXR/SUR/SSR/SHR mode.

Digital servo (as ERB, ERS, and Digital ERG Servos) can operate with NOR/SHR mode.

●PGS Servo (except 2) can operate with SUR/SSR/SHR/NOR mode, SRG Servo can operate with SSR/SHR/NOR mode.

●SUPER VORTEX/SV-PLUS Series, HV-12 STOCK SPECIAL, HV-01 can operate with SSR/SHR/NOR mode.

●BL-RACER, BL-FORCE, F2000, F2200, F3300, SBL-01/02/03CL can not operate with SSR/SHR/NOR mode.

Please use with NOR mode.

●SV-08, HV-10, HV-12, F2500 can operate with NOR/SHR mode.